



Back checking is standard on flooring only,  
but is available on request for wall paneling  
& ceiling boards.

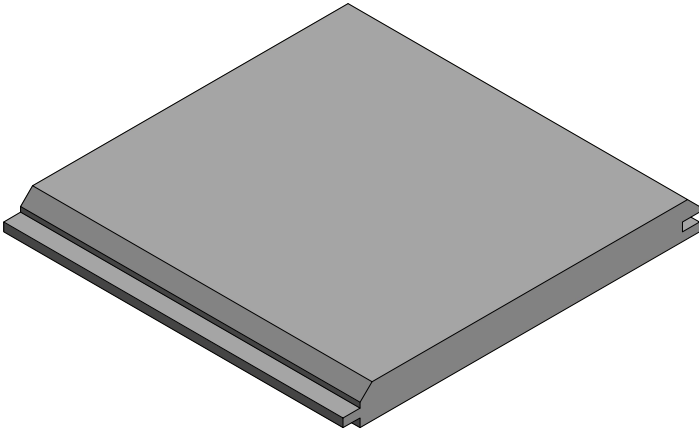

Note: Add microbevel for  
modern style

Scale : 1 : 1	Part Number : TG-02-A	Style : Traditional Transitional Modern
<a href="#">Back</a>	Description : T & G Paneling	

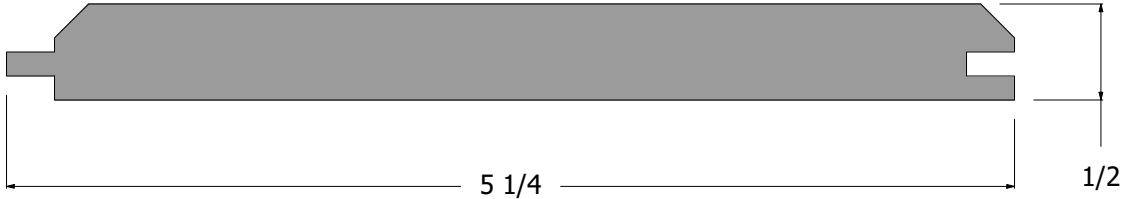