



Back checking is standard on flooring only,
but is available on request for wall paneling
& ceiling boards.

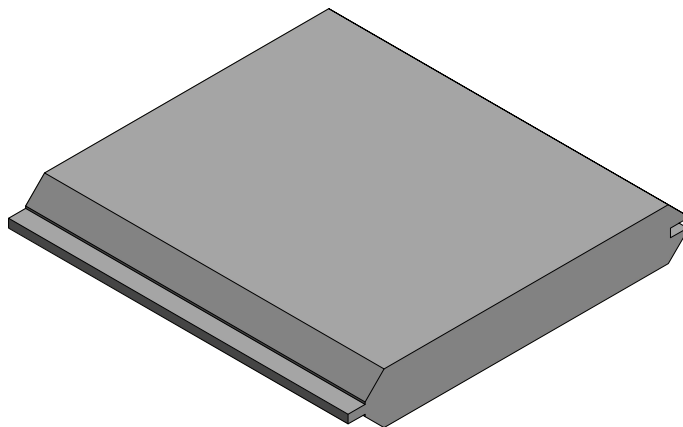

Note: change to microbevel or no
bevel for modern style

Scale : 1 : 1	Part Number : TG-01-A	Style : Traditional Transitional Modern
Back	Description : T G Paneling	

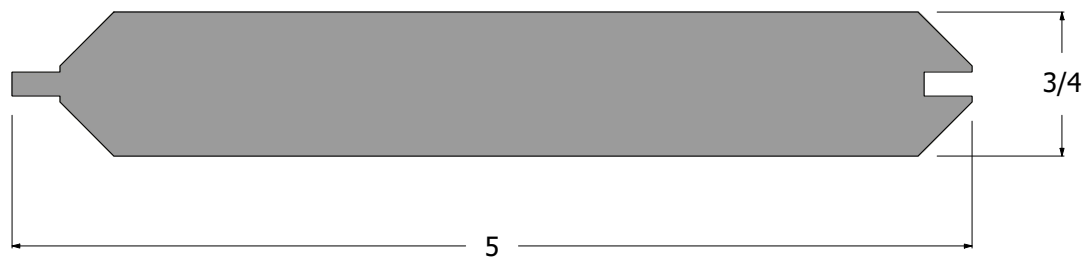